

Curve Flat Irons have been updated!

- When you receive your new iron,
- You will have to hold the power button for 2-3 seconds to get it to turn On.
 - The temperature will then climb to 400 + degrees, when it sets at a temperature for a couple seconds then you may use the + or - to adjust the temp.
 - Your Curve will then stay on while you are using it, It will turn off after 60 minutes of inactive use.
 - To turn off your Curve, you will have to press the power button and hold it for 2-3 seconds when the light turns off you have successfully shut off the iron.



Siggers Warranty

Your Siggers electronic appliance is of the highest quality and should provide reliable service well past the 1 year warranty period.

However, it is very important that you understand the terms and limitations under this warranty. This is Siggers' way of guaranteeing you a satisfactory product.

Siggers warrants this electronic appliance to be free from manufacturing defect for 1 year from the date of original purchase with a registered warranty. Restocking fees apply. To register your warranty, complete the form included with your new styling tool and mail it to Siggers, along with the proof of purchase (receipt). It must be received within 30 days of the original purchase date. Warranties received after the first 30 days are not valid.

SIGGERS RETURN POLICY:

Within 1 year from the date of purchase, the iron can be exchanged for a \$35 restocking fee, if you have a registered warranty.

Within 1 year from the date of purchase, the iron can be exchanged for a \$45 restocking fee, if the warranty has not been submitted and registered with Siggers within the first 30 days of purchase.

Please mail your iron and receipt to:

Siggers Hairdressers
2166 Northlake Parkway
Tucker, GA 30084

Siggers is void of responsibility for repair or replacement if the appliance was dropped, damaged by abuse, tampered with, misused, submerged in water, used with unauthorized attachments, or damaged by acts of nature.

Siggers is not responsible for covering the return shipping costs of any iron.

Upon receiving the restocking payment, and the original damaged iron, a new iron will be sent to you as soon as possible.

Complete this form and submit to Siggers Hairdressers with a copy of your receipt within 30 days of purchase to register and activate your warranty.
Siggers Hairdressers • 2166 Northlake Parkway • Tucker, GA 30084 • 770.491.0800

First Name: _____
Last Name: _____
Address: _____
City: _____ State: _____ Zip: _____
Phone (Cell): _____
Phone (Alt.): _____
Email Address: _____
Date of Purchase: _____



The Curve & THE CURVE 2 PROFESSIONAL 1" FLATIRON

- Professional Salon Hair Straightener
- Advanced MCH Fast and Safe Heating
- Power Indicator Light
- LCD Display
- Korean Titanium Plates
- 60 MINUTE Auto Shutdown
- 360° Swivel Cord (Cable Rotatorio)

Siggers Hairdressers
2166 Northlake Parkway
Tucker, GA 30084
770.491.0800

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER—As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. DO NOT use while bathing.
3. DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
4. DO NOT place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. DO NOT reach into the water.

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual.

SAVE THESE INSTRUCTIONS

Maintenance Information

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hairspray. If cleaning becomes necessary, disconnect the appliance from the power source and allow to cool. Wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

Warning: If any malfunction occurs, DO NOT attempt to repair it yourself. This appliance has no user-serviceable parts.


Storage

When not in use, unplug it. Allow the appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.

Styling Tips for Styling Irons

- Hair should be clean and completely dry before using any styling iron.
- Your styling iron has a specially designed non-stick coating, which will allow you to use your favorite gel, hairspray, or mousse without worrying.
- Plug the iron in for 3 to 5 minutes before use.
- For more stubborn hair, style hair with iron in smaller sections.

WARNING

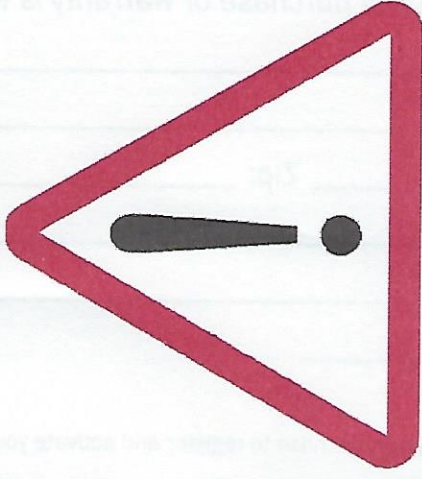

BURN HAZARD KEEP AWAY FROM CHILDREN

